

DiamondCare® Recessed Wall Outlet Electrical Accessories

SPECIFICATION

Electrical Accessories

Electrical Accessories for the DiamondCare® Recessed Wall Outlet are suitable for the services listed in the table below. Each module consists of a rough-in and a finished assembly.

Rough-In Assembly

The rough-in assembly consists of two-gang, galvanized-steel, masonry electrical box and a zinc, die-cast backplate with mounting flanges on all four sides. Both wall and ceiling mounting is possible.

Finished Assembly

The finished assembly consists of the following:



- A painted, steel finish plate
- A powder-coated, light neutral, zinc die-cast faceplate
- The appropriate electrical device as indicated

Any combination of DiamondCare® Recessed Wall medical gas, slides, and electrical accessories can be ganged on the job site by the installing contractor. When ganged, they are aesthetically compatible, giving the appearance of a console.

Features

The modular design permits medical gas outlets, slides, and electrical accessories to be assembled in any sequence on the job site.

All wiring devices are listed by Underwriters Laboratories, Inc.® and the receptacles are hospital-grade.

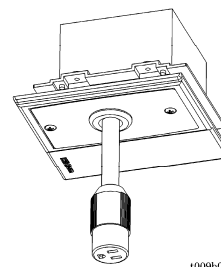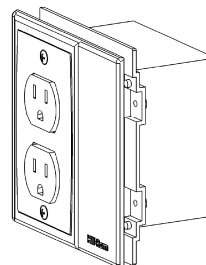

Ordering Information



DiamondCare® Recessed Wall Outlet Electrical Accessories are finished assemblies that can be shipped at a later date, or you can store them for later installation, so there is less chance of being misplaced, damaged, or lost. For more information, contact BeaconMedæS Customer Service at 1-888-4MEDGAS (463-3427).

DiamondCare® Electrical Accessory	Finish Assembly	Rough-in Assembly
125V Duplex, 20A, Ivory	<input type="checkbox"/> 675E01	<input type="checkbox"/> 6803-8030-270
125V Duplex, 20A, Red	<input type="checkbox"/> 675E02	<input type="checkbox"/> 6803-8030-270
Ceiling Power Drop, Straight Blade 20A (Specify Length)*	<input type="checkbox"/> 6803-8030-267	<input type="checkbox"/> 6803-8030-270
Ceiling Power Drop, Twist Lock 20A (Specify Length)*	<input type="checkbox"/> 6803-8030-272	<input type="checkbox"/> 6803-8030-270
Switch, Toggle	<input type="checkbox"/> 675E03	<input type="checkbox"/> 6803-8030-270
Switch, Decora®	<input type="checkbox"/> 675E04	<input type="checkbox"/> 6803-8030-270
Switch, Low Voltage	<input type="checkbox"/> 675E05	<input type="checkbox"/> 6803-8030-270
Blank Provision	<input type="checkbox"/> 675E06	<input type="checkbox"/> 6803-8030-270
Outlet-GFCI, Ivory	<input type="checkbox"/> 675E07	<input type="checkbox"/> 6803-8030-270
Outlet-GFCI, Red	<input type="checkbox"/> 675E08	<input type="checkbox"/> 6803-8030-270


* Recommended height above the finished floor is 76" (193 cm).

Product Dimensions

Wall mounted accessories

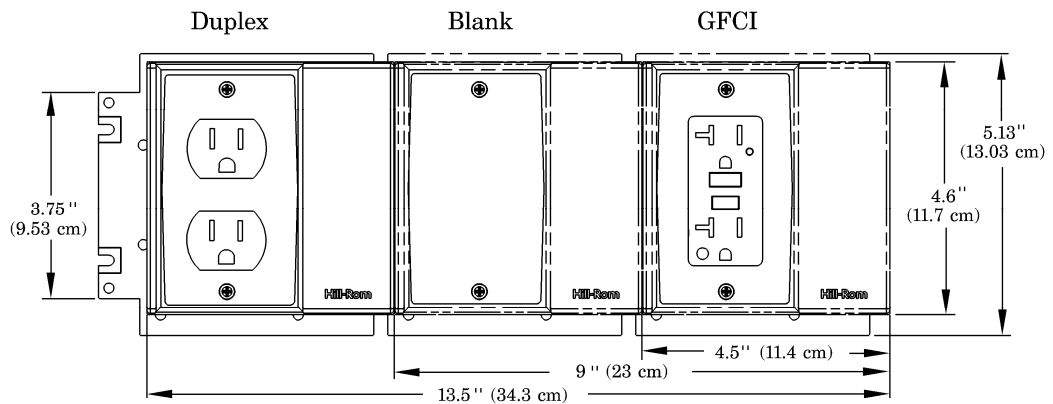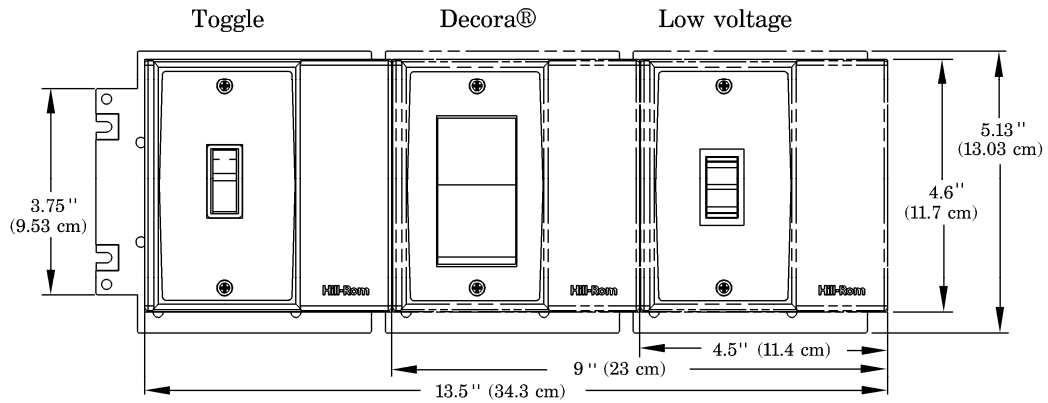

Ceiling mounted power drops

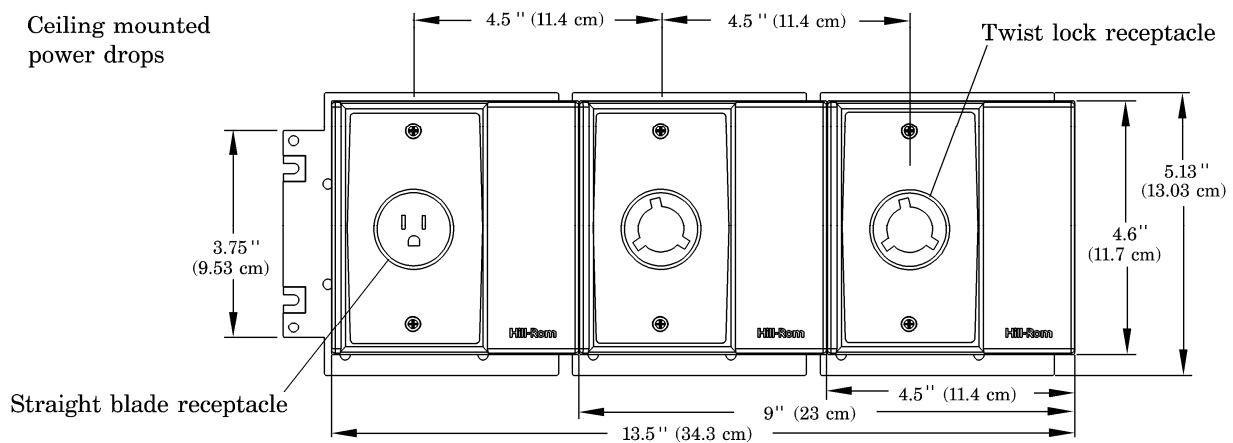

Decora® is a registered trademark of Leviton Manufacturing Co., Inc.

t009b002